
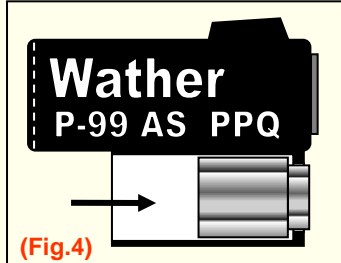
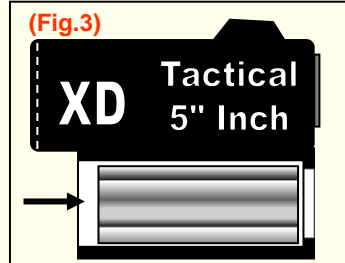
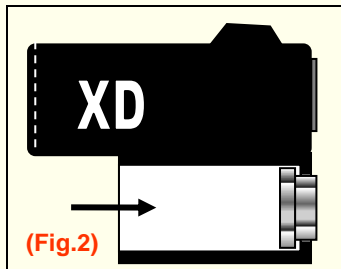


INSTALLATION INSTRUCTIONS DPM RECOIL SYSTEM WITH SPRING PLUG



1. Remove the factory Guide Rod according to the manufacturers instructions.
2. Use always the **SPRING PLUG** that is included in the packing with the DPM Rod.
3. Insert the **SPRING PLUG** in the slide before the installation of the DPM Rod. (Fig 1 - 6)
4. Finally insert the DPM Recoil Rod with one of the External Springs .

ATTENTION: For some DPM Recoil Rods the included springs are with one open coil and one close . The close coil has to be got into the Rod (Fig 7).

Please look the below examples (Fig 1 - 6)

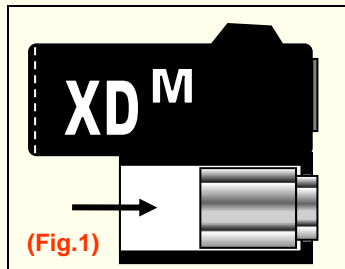

Continue 

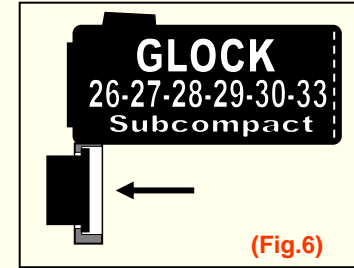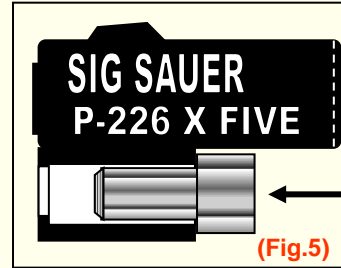

Before loading the magazine function (open and close) the slide several times to ensure that the DPM ROD functions unrestricted.



ATTENTION: Use always eye protective glasses and follow the above instructions when you install the DPM Rod.

For any questions about the installation please contact: service@dpmsystems.com

Copyright © 2010 DPM Systems Technologies Ltd.